

FCC INFORMATION FOR THE CONSUMER

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio television reception, which be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY INFORMATION

Paofit warrants the TreadTracker product contained in the original packaging against defects in materials and workmanship for a period of 90 days from the date of the original purchase by the end-user purchaser ("Warranty Period"). Paofit does not warrant that the operation of the TreadTracker will be uninterrupted or error-free. Paofit is not responsible for damage arising from failure to follow instructions related to TreadTracker use.

The warrant does not apply:

(a) to cosmetic damage, including but not limited to scratches or dents; (b) to damage caused by use with another product; (c) to damage caused by misuse, accident, abuse, liquid contact, fire, earthquake or other external cause; (d) to a TreadTracker that has been modified without the written permission of Paofit or (e) defects caused by normal wear and tear. The warranty described in this paragraph, during the Warranty Period is referred to herein as the "Limited Warranty".

All returns must be made to original place of purchase. If you have purchase directly from RunSocial, warranty is obly applicable upon producing a valid receipt from RunSocial. If the product was not purchasaed from RunSocial, please contact the shop you bought from to arrange for a return.

WARRANTY DISCLAIMER AND LIMITATION ON LIABILITY

OTHER THAN THE LIMITED WARRANTY EXPRESSEDLY PROVIDED IN THE PRIOR PARAGRAPH, PAOFIT MAKES NO OTHER WARRANTIES AND EXPRESSLY DISCLAIMS ANY OTHER WARRANTIES (INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT), GUARANTEES, REPRESENTATIONS, PROMISES, STATEMENTS, ESTIMATES, CONDITIONS OR OTHER INDUCEMENTS, EXPRESS, IMPLIED, ORAL, WRITTEN OR OTHERWISE. CUSTOMER UNDERSTANDS AND ACKNOWLEDGES THAT THERE IS NO GUARANTEE THAT THE TREADTRACKER WILL MEET CUSTOMER'S EXPECTATIONS. TO THE MAXIMUM EXTENT PERMITTED BY LAW, PAOFIT WILL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, PUNITIVE, SPECIAL OR OTHER SIMILAR DAMAGES NOR FOR ANY LOSS OF PROFITS, LOSS OF REVENUES, LOSS OF SAVINGS, LOSS OF CLIENTELE, LOSS OF USE OR LOSS OR CORRUPTION OF DATA, WHETHER UNDER TORT (INCLUDING NEGLIGENCE), CONTRACT OR OTHER THEORIES OF RECOVERY, EVEN IF PAOFIT WAS OR SHOULD HAVE BEEN AWARE OR WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL PAOFIT'S LIABILITY ARISING OUT OF THIS AGREEMENT FROM ANY CAUSE OF ACTION WHATSOEVER EXCEED THE AMOUNTS PAID BY THE CUSTOMER FOR THE PARTICULAR PRODUCT IN QUESTION WITH SUCH AMOUNT NOT, IN ANY CASE, TO EXCEED THE EXPECTED RETAIL PRICE. EACH PARTY AGREES AND DOES WAIVE TRIAL BY JURY IN ANY ACTION, PROCEEDING OR COUNTERCLAIM BROUGHT AGAINST THE OTHER PARTY FOR ANY MATTER WHATSOEVER ARISING OUT OF OR IN ANY WAY CONNECTED WITH THIS AGREEMENT. NO ACTION, SUIT OR PROCEEDING SHALL BE BROUGHT AGAINST PAOFIT MORE THAN ONE YEAR AFTER THE DATE OF DELIVERY OF THE TREADTRACKER UNDER THIS AGREEMENT.

PRODUCT CARE

- (1) Keep the accessories dry and away from open flames or other heat sources.
- (2) Do not leave the accessories in a dusty or humid place.
- (3) Do not modify or disassemble the accessories under any circumstances.
- (4) Never stand on the accessories.
- (5) Use a dry cloth to clean the accessories, never use chemicals.
- (6) Use the accessories only with the appropriagaming system for which it was designed.
- (7) Regularly inspect the accessories.
- (8) If the accessories functions in an unusual manner or produces smoke, immediately stop use and turn off the power.

Powered by Paofit. TreadTracker and RunSocial are trademarks of Paofit Technology Pte Ltd. Copyright © 2015 RunSocial. All rights reserved.

TreadTracker

EN User Manual

Model: PFTK001
Assembled in China
Art No. 501-PFTK002001

 
FC  **CE** **0700**  **Bluetooth**
SMART

Awesome! You're now onboard to accurately track your digital running experience. The guide ensures that you get the best out of it.


CONTENTS

- 1 x TreadTracker sensor
- 1 x Micro USB charging cable

REFERENCE

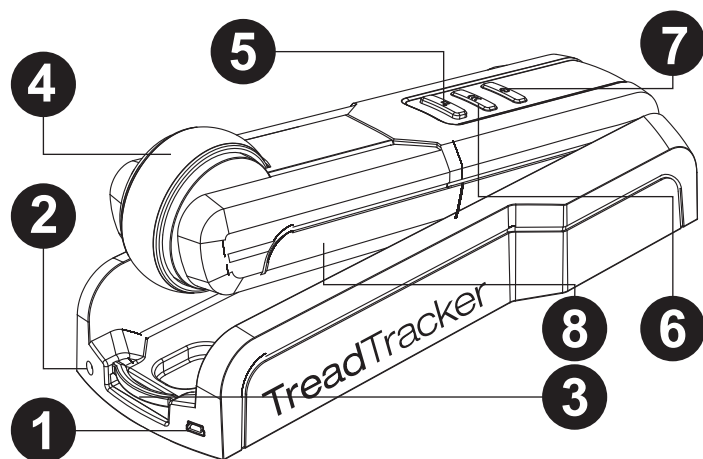

 1. USB charging port
2. Jack input
3. Security bar
4. Main wheel
5. Release button
6. Battery indicator
7. Bluetooth indicator
8. Sensor arm
9. Power on/off switch
10. Rotation wheel

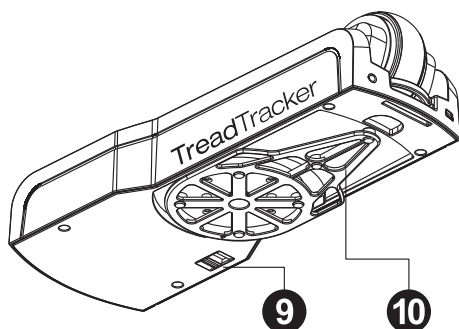

CONNECT TO RUNSOCIAL APP

(a) Connect using Bluetooth.

 
- Download RunSocial app from the app store.
- Start the RunSocial App and go to Options menu.
- Select "Speed Tracking" and connect to "TreadTracker".
- TreadTracker is either in hibernation or switched off if bluetooth indicator (7) is not lighted. TreadTracker is connected if bluetooth indicator (7) is glowing a constant blue. TreadTracker is seeking to connect if bluetooth indicator (7) is flashing in blue.
- Once connected to TreadTracker via Bluetooth, you can customize your Bluetooth signal name by clicking on the icon next to the Bluetooth name in your RunSocial app.

(b) Connect using 3.5mm Jack cable


- TreadTracker has a 3.5mm jack input (1) that you can use to connect directly to the jack input of your mobile device. Note that the jack cable is not provided but can be purchase separately from hardware stores.

HOW TO USE


Position TreadTracker on the floor, strictly underneath mid-section of the treadmill, with main wheel (4) in the same direction as the treadmill.

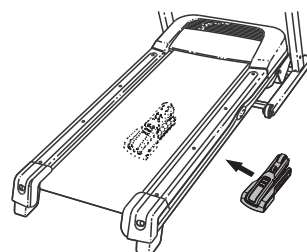

 
Press the release button (5) and ensure that the main wheel (4) swings upwards to contact with the belt of the treadmill. If more height is required, pull the main wheel to extend the arm until you hear a click sound. To restore, press the release button (5) and slide the extended arm back into position

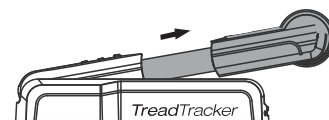

 The rotation wheel (10) helps to balance TreadTracker to stay upright when in use. The rotation is locked when switch (9) is OFF, and is free to pivot side to side when power switch is ON.

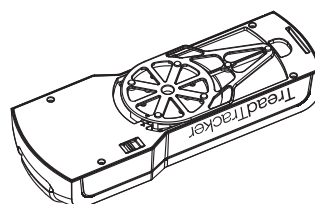

 Do not place it an an angle. Use TreadTracker only within following environment conditions: 0°C-45°C and ≤ 90% humidity.

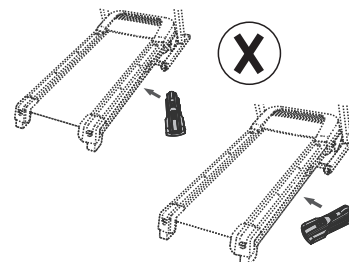

POWER SOURCE

- TreadTracker comes with a rechargeable lithium ion battery so it can function without an external power source. The battery indicator (6) will glow in Red when its 10% or less, Orange if 50% or less and Green if above 50%.
- To connect TreadTracker to a power source, connect the micro USB charging cable provided into the USB charging port (1) and the other end to a computer or similar.
- The battery indicator (6) will glow for a few seconds when not plugged into a power source. When plugged in, the battery light will glow.
- Charging from a wall socket is also possible by connecting the USB cable to a USB plug (input 110-240V, output 5V, 1Amp) such as an iPad or iPhone wall plug. Exercise caution that the USB cable does not get trapped by treadmill.
- To fully switch off TreadTracker, turn the power switch (9) located on the underside to off.

POWER ON/OFF

- TreadTracker can be turned on via the power switch (9) located on the underside.
- Hibernate (Sleep mode): If TreadTracker is plugged into an external power source, it will hibernate once the main wheel (4) has not moved for 3 hours. If TreadTracker is using the internal battery source it will hibernate once the main wheel (4) has not moved for 10 minutes.
- To reactivate (wake up) TreadTracker from hibernation, the main wheel (4) should be rotated for at least 3 seconds.
- To fully switch off TreadTracker, turn the power switch (9) located on the underside to off.

RunSocial is evolving, check at www.RunSocial.com for latest. For extra help, you can reach out to us at support@runsocal.com